




Wall Switch and Socker

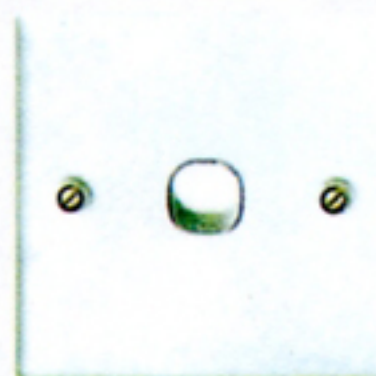


31/1/2A
31/2/2A

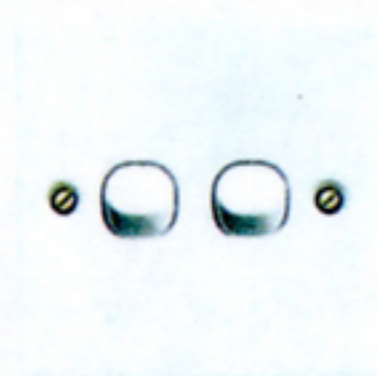


32/1/2A
32/2/2A

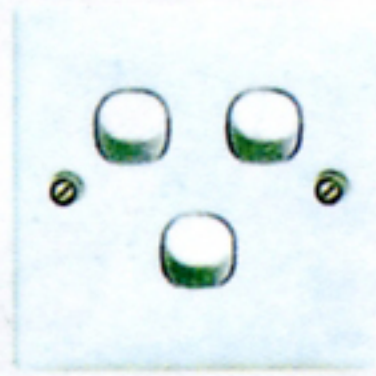


33/1/2A
33/2/2A

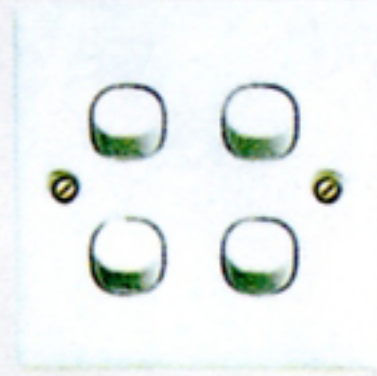

34/1/2A
34/2/2A

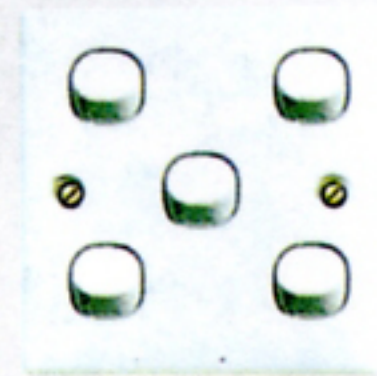


35/1/2A
35/2/2A

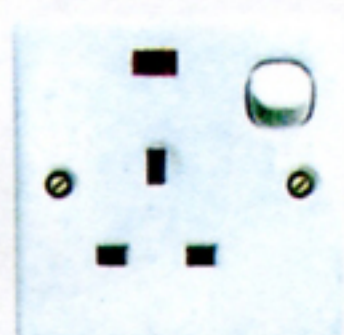

15N



25

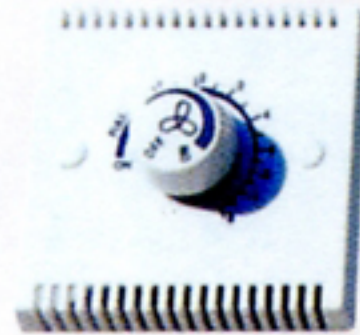


C




L




H3

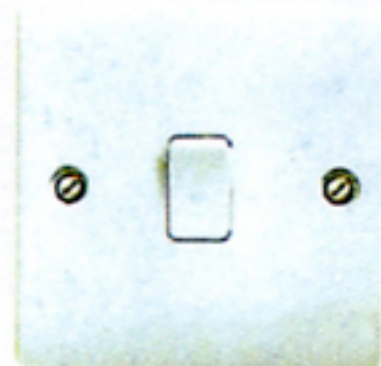


M8870G
1G1W 1G2W

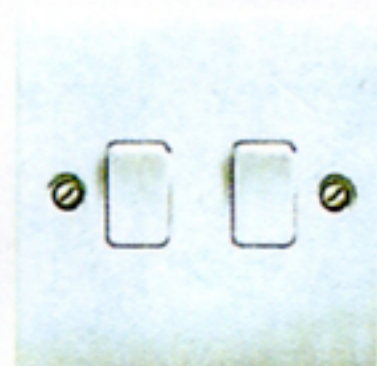


M8872G
2G1W 2G2W

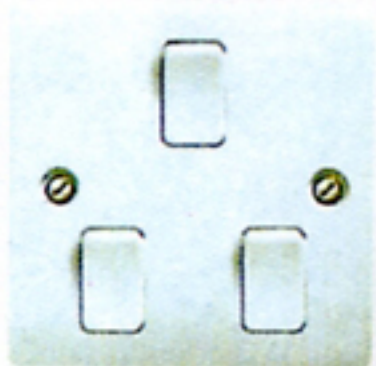

M8873G
3G1W 3G2W

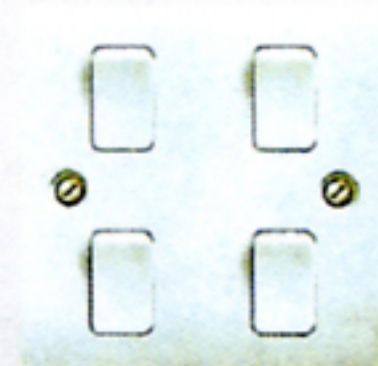


M8874G
4G1W 4G2W

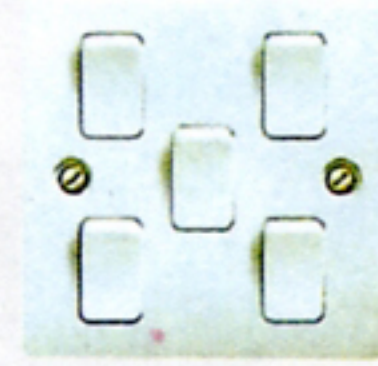

M8875G
5G1W 5G2W



MZ 001

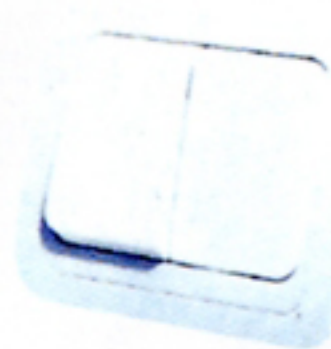

MZ 002




MZ 003



MZ 004




LG8259

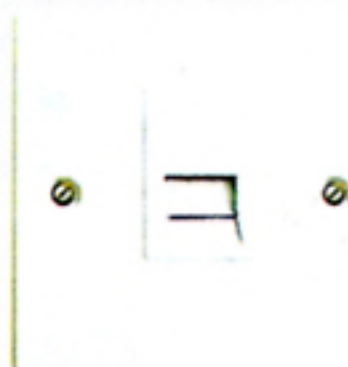


T7801




T7016

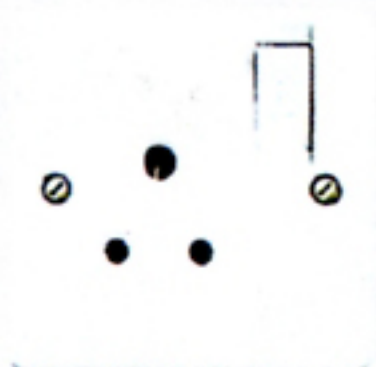

T7052

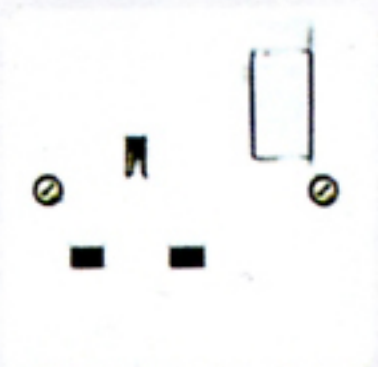

T7018

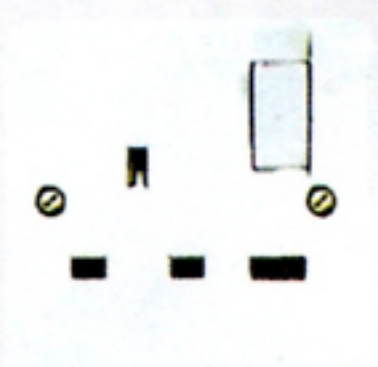

T7019